


## Quick Reference Guide

**WARNING:** The depth sounder is not to be used for navigation or as a device to avoid grounding which may result in boat damage or personal injury. Always use caution operating in shallow areas and maintain a very slow speed. Be aware that depths may change too quickly for you to react and avoid grounding.

### Pilot System

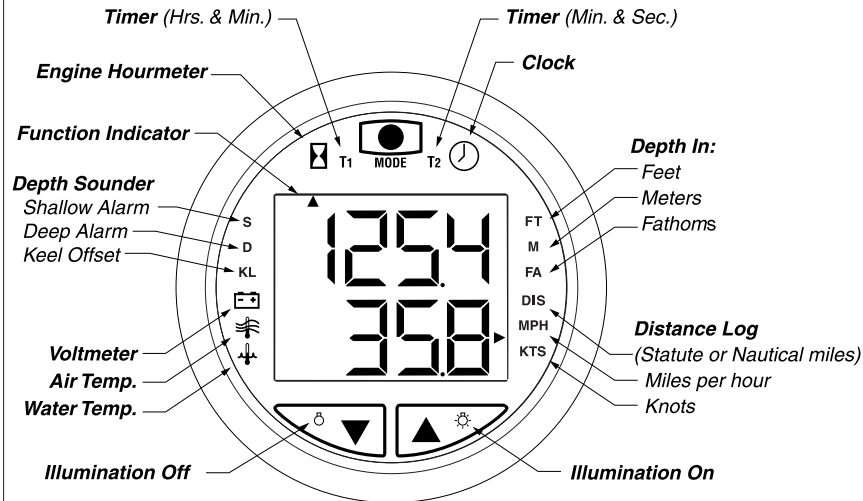

### Key Pad Functions

#### Power ON or OFF

On, press . To turn Pilot off, press and hold  until display goes blank.

#### Illumination On or OFF:

On, press (▲). Off, press (▼).

**Select Function:** Press  quickly. The Pilot will beep and selected display will blink.

#### Select Upper or Lower Display:

While display is blinking, press (▲) to select upper display or (▼) to select lower display.

#### Select Desired Function:

While blinking press  quickly again until (▶) points to desired function.

**Editing a Function:** Press and hold  until Pilot beeps. Edit Mode will activate.

#### Select Units for Any Active Function: Depth Sounder / Speedometer and Distance Log / Temperature:

Press and hold  until Pilot beeps. Press  quickly until selected display reads "U" (units). Press (▲) / (▼) to move function indicator to either Feet (F), Meters (M), Fathoms (FA) / Miles Per Hour (MPH), Knots (KTS) / Fahrenheit (F), Centigrade (C).

#### Set Shallow or Deep Alarm and Keel Offset:

Press and hold  until Pilot beeps. Continue pressing  quickly until Function Indicator points to "S", "D", or "KL". Press and hold (▲) / (▼) to adjust reading to the desired depth. **NOTE: To deactivate an alarm, reset it to zero.**

#### Calibrate the Speedometer or Distance Log Units:

Press and hold  until Pilot beeps. Press  quickly until lower display reads "C" (calibration). Press (▲) / (▼) to change speed reading to desired speed.

#### Clear Distance Log:

Press and hold  until Pilot beeps. Continue pressing  quickly until lower display reads "CLR" (clear). Press (▲) / (▼) to clear Log reading to zero.

#### Timer:

##### Select Timer Functions.

Press  quickly. Press (▲) to Select upper display. Continue pressing  until the Function Indicator is pointing to either hours and minutes or minutes and seconds.

##### Start or Stop Timer.

Press (▲) / (▼) to start or stop timer at any time.

##### Reset Timer.

Press and hold  until Pilot beeps.

##### Set clock:

Press and hold  until Pilot beeps. Press (▲) / (▼) to select minute. Press and hold (▲) / (▼) to select hours.